

Electronic Battery Motor Programing Instructions

It is **EXTREMELY IMPORTANT** to charge the motors at least 8 hours on initial Charge

Programing:

- 1) Press the button on the head of the motor [program button] (the motor will oscillate).
Immediately press and hold the (up button) on the remote (the motor will oscillate again)
At this time the motor and remote have been joined
 - a) Confirm motor rotation:
To change motor rotation press and hold the (stop button) on the remote (the motor will oscillate) then press and hold the (down button) on the remote (the motor will oscillate again)
verify correct rotation

Setting Limits:

*** Important the upper limit must be set first**

- 2) Move the shade 3 to 4" below the upper limit position press the [program button] located on the back of the remote (the motor will oscillate) this will put the motor in program mode. Now move the shade up to the desired location and press the (program button) again (the motor will oscillate) the upper limit is now set

Setting Lower Limit

- A) Move the shade down away from the upper limit previously set about 4-6 inches from the desired bottom limit, press the [program button] (the motor will oscillate) Now move the shade down to the desired location of the lower limit and press the [program button] again (the motor will oscillate) the lower limit is now set

Setting Intermediate Limits (Up to 5)

- B) Move the shade away from the previously set limit, about 6 inches, press the [program button] (the motor will oscillate) Now move the shade to the desired location of the intermediate limit and press the [program button] again (the motor will oscillate) the intermediate limit is now set

Erasing a Limit * Note the first Limit (upper Limit) cannot be erased

- 3) Move the shade to the limit you wish to erase. Press and hold the [program button] for approximately 7 seconds. The motor will oscillate twice at this time the limit has been erased

Adding an a additional remote

- 4) Individual Channels **must** be added 1 by 1 (Make sure each remote is on the same channel unless you wish to switch the channels when transferring the information) **DO NOT** attempt to transfer all the channels at one time by having the remotes on the all channel or you will no longer have individual channels and **this can not be undone.**
 - A) Press and hold the (stop button) on the Remote already programed for approximately 5 seconds

Electronic Battery Motor Programing Instructions

(the motor will oscillate) immediately press the (up button) on the Remote you wish add. Again (the motor will oscillate) the program instructions have now been copied to the new remote

Sleep mode: adding additional motors to a single channel

Setting motor into sleep made as follows:

5) Press and hold the program button on the head of the already programmed motor the motor will beep and then jog but keep holding the button down until you hear a long beep. The motor is now in sleep mode.

5A) Program the new motor buy using the exact same steps as above to begin programming the second motor. When you have finished setting the limits on the newly programmed motor you would continue in the same fashion until all motors that you wish to have on that channel are programmed.

5B) You then begin waking up each motor by:
pressing the program button on the head of the motor until the motor beeps then pressing the up button on the remote on the desired channel

6) Erasing the limits and putting the motor back to factory Default specifications is done by pressing the program button on the head of the motor 5 consecutive times and holding the button on the fifth time until the motor jogs, letting you know the memory has been erased.