


SKYLIGHT PLEATED SHADE INSTALLATION

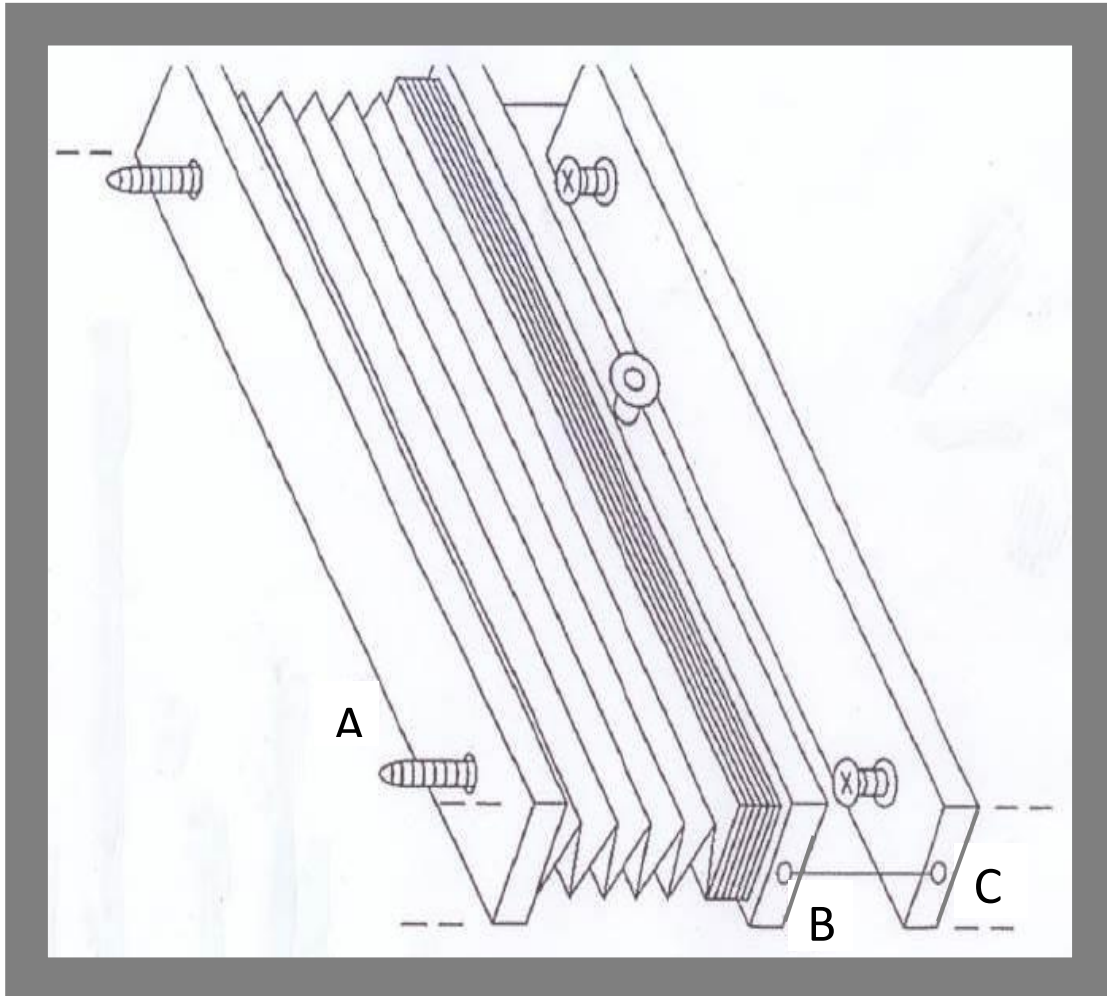

1. Locate pre-drilled holes in headrail (A). They are located on the underside of the headrail behind the first fabric pleat. The holes will have plastic installation grommets. Be careful not to damage the fabric when installing the screws. A long screw bit is recommended (not included).
2. Position headrail (A) in skylight opening. Install screws through the headrail (A) in the pre-drilled holes and into the skylight frame.
3. Push center rail (B) next to the headrail (A).
4. Position rail (C) to the other end of the skylight, then install screws thru pre-drilled holes and into frame.

NOTE: Sufficient pressure must be applied to the bottom rail (during installation). This will stretch the spring and cord combination allowing the bottom rail to reach mounting position and create tension on the cords. This